


Wheel Sentry®


How it works

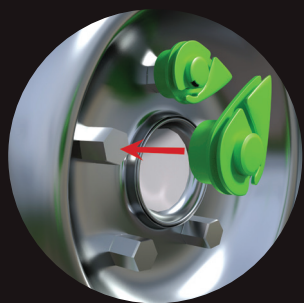

Step 1

Fit Wheel Sentry® indicators to your wheel nuts – a simple push fit by hand.

For uneven stud configurations the indicators should be fitted in a clockwise direction, and for even configurations the indicators should be fitted facing each other in pairs.

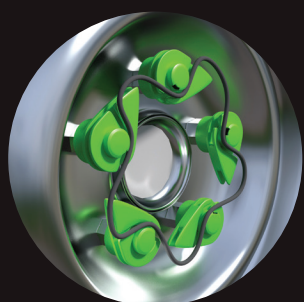


Step 2

Apply the Viton band to interlink all Wheel Sentry® indicators.



Step 3

Check that Viton band is linking smoothly and all indicators are in line.

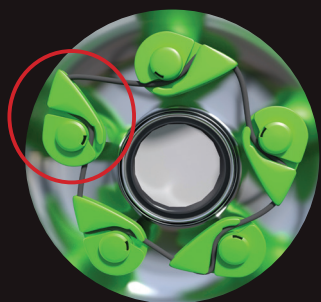

Step 4

Before a journey, check indicators for any loosening of wheel nuts.



Step 5

Simply remove the Viton band and indicator from the loosened nut, tighten and re-torque the nut, then re-apply Wheel Sentry® for your next journey.